


**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**

**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**


**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**

**Instrucciones de montaje de juego de cables
eléctricos para gancho de remolque con
caja de conexiones 12-N según
norma DIN/ISO 1724**









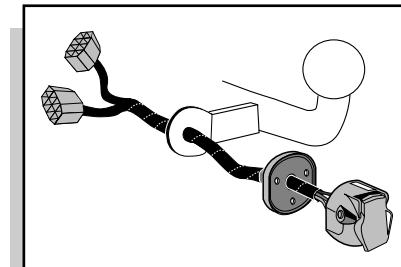







Peugeot 807 03/2002-
Citroën C8 03/2002-

Fiat Ulysse 03/2002-
Lancia Phedra 03/2002-

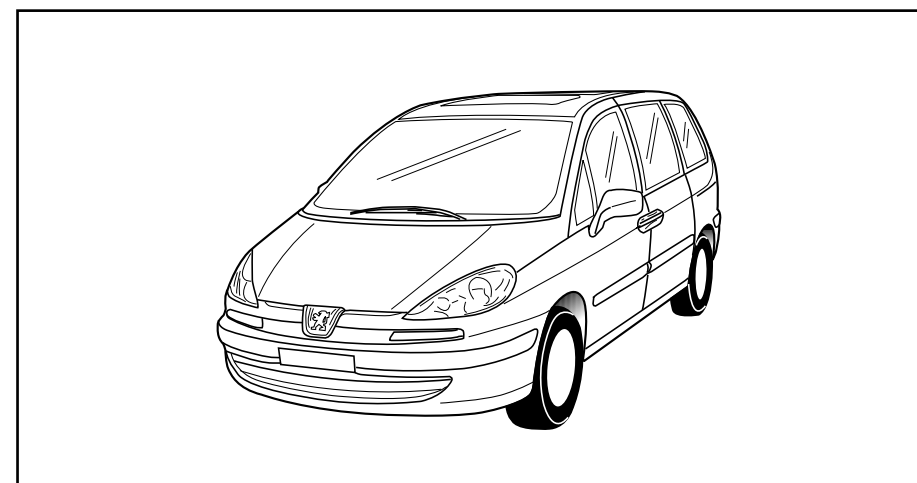


Bestel Nr.: CT-015-BB

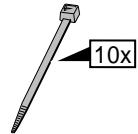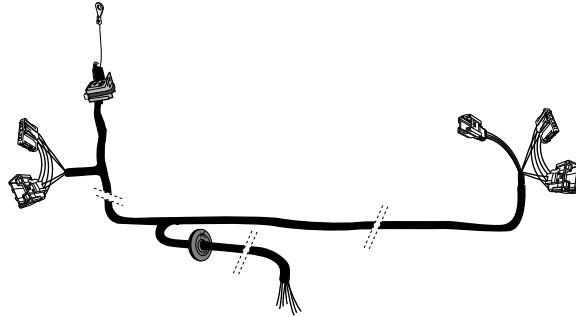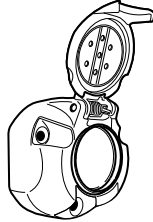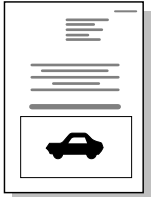


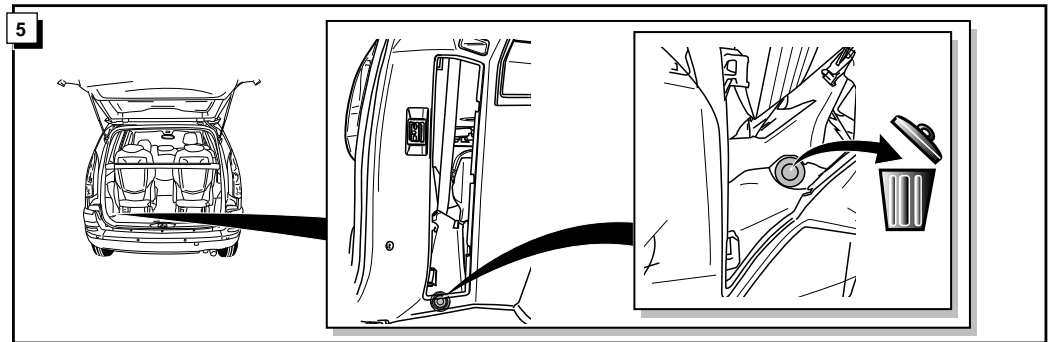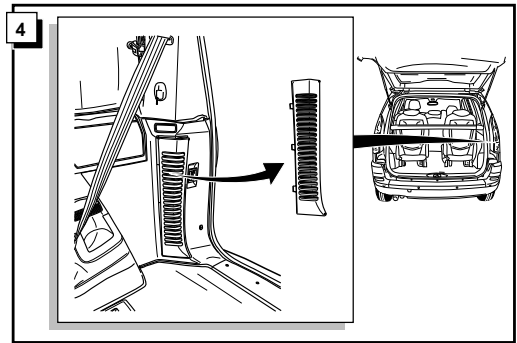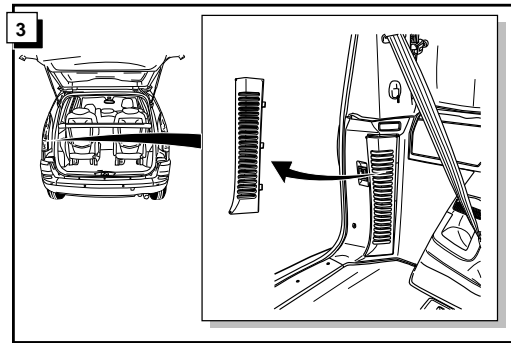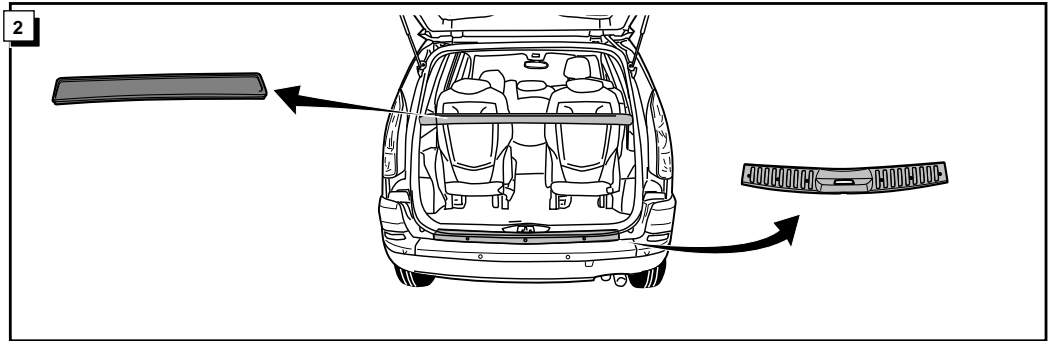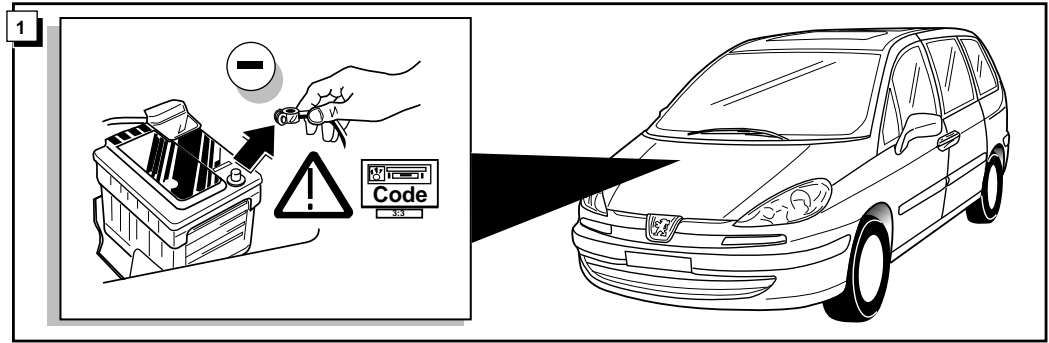


INFO

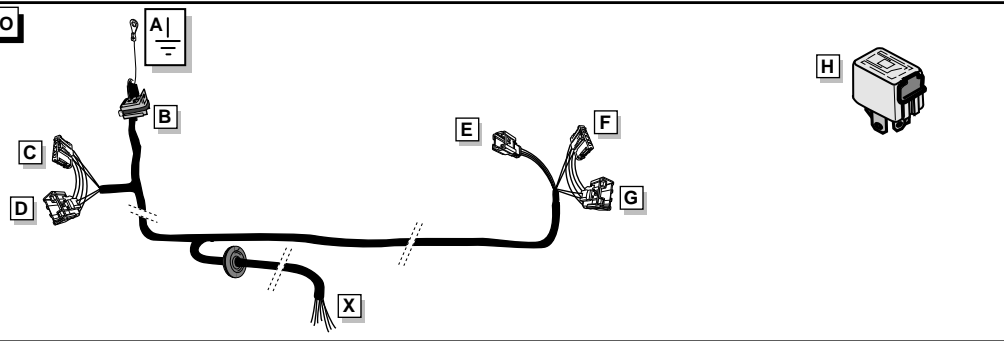


ROUTING

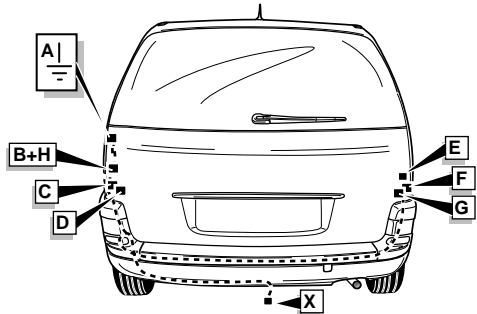


6

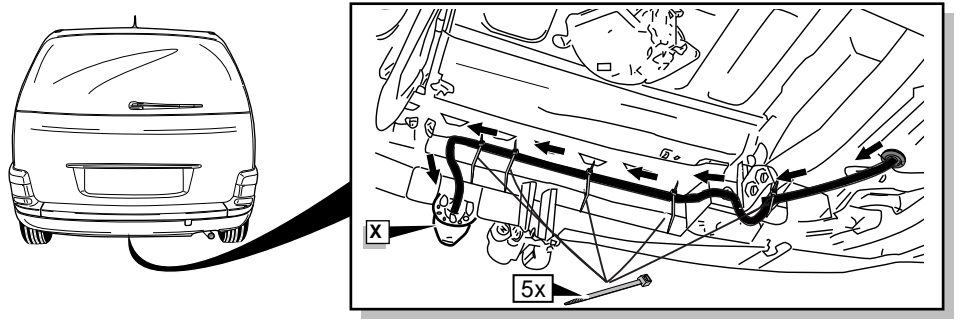


7

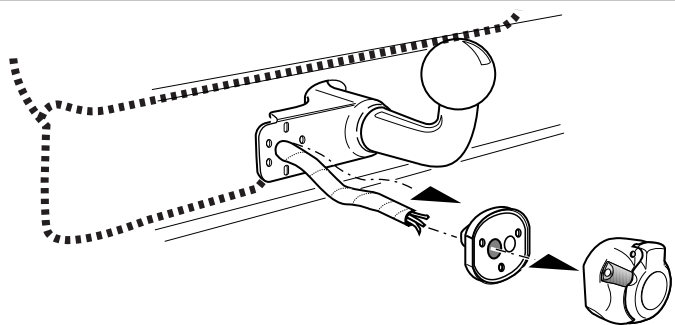


18

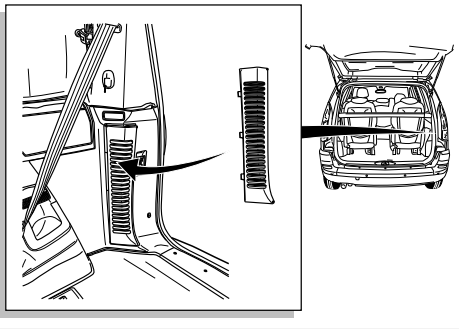

19

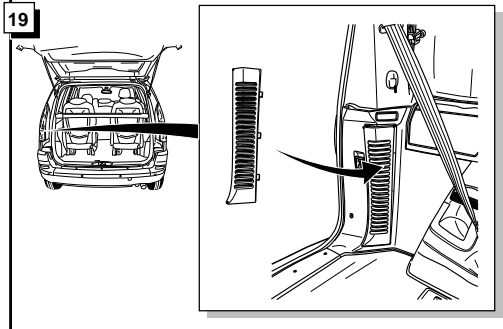

20

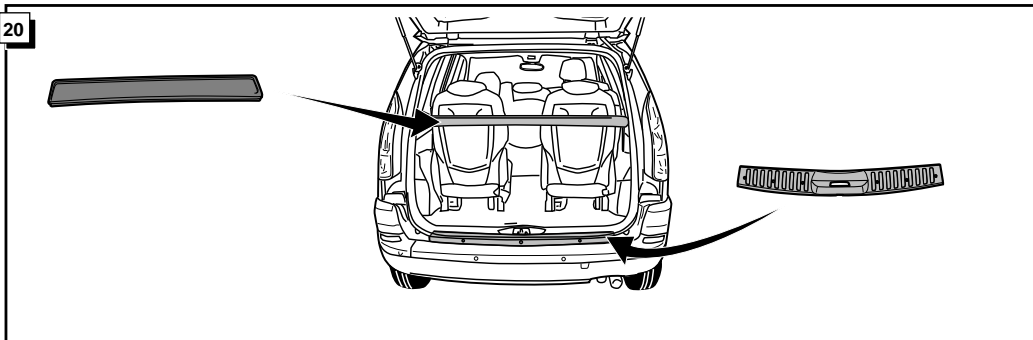


INFO

**Anschluß Steckdose / Connection de la prise / Socket connection
Contactdoos aansluiting / Conexión del caja de enchufe**

DIN/ISO 1724		(D)	(F)	(GB)	(NL)	(ES)
	1/L	gelb	jaune	yellow	geel	Amarillo
	2	blau	bleu	blue	blauw	Azul
	3/31	weiß	blanc	white	wit	Blanco
	4/R	grün	vert	green	groen	Verde
	5/58-R	braun	marron	brown	bruin	Marrón
	6/54	rot	rouge	red	rood	Rojo
	7/58-L	schwarz	noir	black	zwart	Negro
	8/58-b	grau	gris	grey	grijs	Gris

8

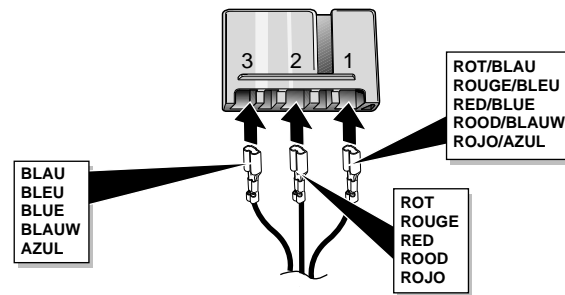

9

